EVOTAB 4 TABLET

USER MANUAL

Safety Precautions

On Battery

- Charge the battery only in temperature that ranges from 0℃ to 35 ℃.
- Do not charge Tablet PC if the battery is found damaged or leaking.

On Operation

- Never subject Tablet PC to extremes of light, temperature, moisture or vibration.
- Do not use or store Tablet PC in a location subject:

  A. Extreme high temperature, such as in a sun-heated car.

  B. Direct sunlight.

  C.High humidity or places with corrosive substances.

  D. Sub-zero condition, especially during winter.

On Micro SD card

- After inserted a Micro SD card, if the device has no response, please take out and insert again.
- Do not remove Micro SD card or turn off Tablet PC during data writing or reading to prevent damage to data and to the device.
- Make sure the Micro SD card is unlocked before writing or deleting data in the card.
- Backup your files and data before formatting the Micro SD card. Please format the Micro SD card in FAT.

Contents

SAFETY PRECAUTIONS I

CONTENTS II

CHAPTER 1 BASICS 1

PARTS AND CONTROL 1
PACKET CONTENTS 2
POWER ON AND OFF THE DEVICE 2
CHARGING THE DEVICE 2
TRANSFERRING CONTENTS 3
STAND BY /WAKE UP MODE 5
HOME SCREEN 6
MAIN MENU 8
TOUCH SCREEN OR BUTTONS 9
ONSCREEN KEYBOARD 10
CONNECTING TO THE INTERNET 10
SWITCHING SCREEN ORIENTATION 11

CHAPTER 2 GETTING STARTED 12

WEB BROWSER 13
WATCHING VIDEOS 16
PLAYING MUSIC 18
VIEWING PHOTOS 21
USING CAMERA 23
SOUND RECORDING 24
GMAIL 26
FILE MANAGER 27
MANAGING THIRD PARTY APPLICATIONS 32

CHAPTER 3 SETTINGS 32
ALARMS 33
WIRELESS & NETWORKS 35
SOUND 37
DISPLAY 37
STORAGE 37
BATTERY 37
APPS 37
ACCOUNTS & SYNC 37
LOCATION SERVICE 37
SECURITY 38
LANGUAGE & INPUT 38
BACKUP & RESET 38
DATE& TIME 38
ACCESSIBILITY 38
DEVELOPER OPTIONS 38
ABOUT TABLET 38

CHAPTER 4 TROUBLESHOTTING 38

CHAPTER 5 APPENDIX 39
MAINTENANCE 40
PRODUCT SPECIFICATIONS 40
CERTIFICATION INFORMATION 42
COPYRIGHTS AND TRADEMARK NOTICE 43
DISPOSAL AND RECYCLING INFORMATION 44
DISCLAIMER 44

Chapter 1 Basics

EVOTAB 4 is a Tablet with touch screen. It supports Wi-Fi. camera function and third party software, Users can get access to over 450,000 apps and enjoy TV shows, movies, music and much more.

Parts and Control

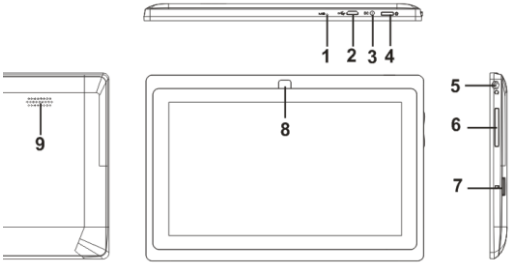

1. **Microphone**
2. **Micro USB jack** – for charging or data transfer.
3. **DC-in** jack – connect to AC power adapter for charging
4. **Power button** – press and hold for 3 seconds to turn on and off. Press and hold the **Power** button for 8-10seconds to reset the reader.
5. **Earphone jack**
6. **Volume +/- button** – press to adjust volume level.
7. **Memory card slot**
8. **Front Camera**
9. **Speaker**

Packet Contents

- 1x Tablet PC
- 1x USB cable
- 1x User Manual

Power On and Off the device

- Press and hold the **Power** button for 3 seconds to turn the device on.
- It may take a moment for the device to turn on and load.
- Press and hold the **Power button** for 3 seconds to select **Power off,** then it will appear a confirmation window, tap **OK** to turn off the device.

Charging the device

- You need to charge the device prior to use it for the first time or when battery power is low.
- Charge the device using AC adapter with output 5V, 1.5A.
- Charging through PC may not be able to fully charge the device due to the low output charging current from PC USB port.
- Please turn the device to standby mode to shorten the charging process.
- It will take about 4 hours to fully charge the device in standby mode (LCD off).
- When the power cable is connected to the device for charging, the device will enter into standby

mode after remains idle for 60s. Press the [Power] button to wake up the device.

- The battery status is displayed at the lower right of the screen.

Transferring Contents

From Computer

- The device supports USB Mass Storage Device function.
- To import contents (ebooks, video, audio, photo etc) into the device, connect the device to PC via the supplied USB cable.
- Upon successful connection to PC, turn to the EVOTAB 4, on the status bar, flick upwards to display an ongoing list.
- Select "**USB connected**", then tap on "**Turn on USB storage**" to enter USB mode and all operation will be halted.
- Go to [**My Computer**], double click on the device's disk to open.
- Perform normal file management operation like other USB device.

From memory card

This unit supports Micro SD card up to 32 GB

To insert a Memory card

Insert the card correctly with the contact pin facing downwards as illustrated below. Pushing the card into Memory card slot, then you should hear a click when the card is seated correctly. You may damage the card and the device if Micro SD card is not inserted correctly.

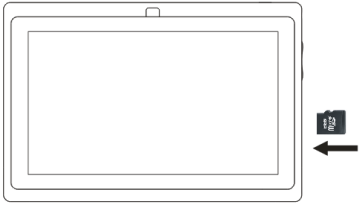

To remove Micro SD card, push the card once again until it clicks. When a Micro SD card is inserted in or ejected from the device, it may take few seconds for the device to update the content. Please avoid inserting or ejecting Micro SD card when other operation is running as this may cause the system hang.

- Do not remove the card if the content inside the card is being played. This will halt the operation of the device and cause the device to restart.
- If the system is not responding, press **Power** button for 6 seconds to reset.

Note: you can also transfer contents to EVOTAB 4 through USB dongle (not included). Insert a USB storage device or memery card into the USB dongle, then connect the dongle to EVOTAB 4 via the USB cable.

USB dongle and USB cable

Stand by /Wake up mode

Press **Power** button to enter Stand by mode, then the device locks automatically.
Locking the device turns off the display to save your battery and to prevent unintended operation of the device.
To wake up the device, press **Power** button again, then press the Lock button and drag the slider.

Home screen

When the device is turned on, it will enter into the Home screen.

Menu bar

1. Search bar for web browser
2. Main menu button
3. Widget & Shortcut button
4. Return button
5. Home button
6. Running application
7. Volume - button
8. Volume + button
9. Option Menu button

Status bar

10. USB connection
11. USB debugging
12. Memory card indication
13. Time Display
14. Wi-Fi connection
15. Battery indicator

Flick upwards at the status bar to display an ongoing list, tap to display more status information.

Customizing Home screen

Adding icons on homescreen

You can add shortcuts, widgets or folders to home screen.

To add icons on screen, tap to enter Main menu, press and hold on the desired options to go to homescreen, then drag the icon to the desired place.

Moving icons on the home screen

1. Touch and hold an icon to be moved until you hear a vibration sound.
2. Drag the icon to the desired place.

Removing icons on home screen.

Touch and hold the desired icon to be removed until it appear a "**X**" at the top screen, then drag the icon on

"**X**", when the icon turns red, release it to remove.

Setting wallpaper for homescreen

Tap → **Wallpaper**, select the desired picture as wallpaper.

About the additional home screen

You can use up to five screens. Flick left or right to go to other home screen.

Go to the first Home screen: press the **Home** button.

Main menu

All application icons are on the Main menu.

- On homescreen, tap to show the Main menu.
- Tap **APPS** tab, then tap an icon on the Main menu to open the desired application.
- Tap **WIDGETS** tab, then touch and hold on a widget to quick bring your favorite content and services.

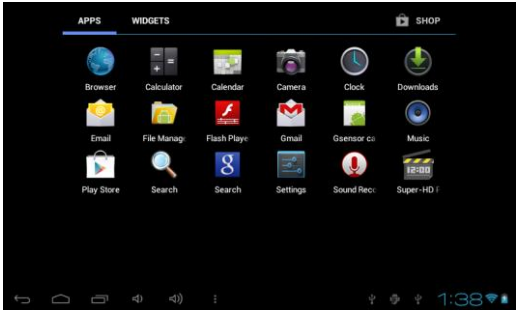

Touch screen or buttons

- Tap an icon to open an application.
- Tap at the bottom of the screen to display the menu bar.
- At the Menu bar, tap anytime to return to previous screen, press and hold to return to Home screen.
- Tap anytime to return to Home screen.
- Tap on the screen anytime to display the option menu.
- Tap to show the running application.
- Tap / to adjust volume level.

Scrolling

- Drag your finger up and down to scroll file list.

- Flick to scroll quickly.
- On webpage, drag up and down to scroll around the page（be care for so as not to click the link）.
- Tap or touch anywhere on the screen to stop it immediately.

Onscreen keyboard

Use the onscreen keyboard to enter text, such as text messages, or web addresses.

- Tap a text field to bring up the keyboard.
- Touch and hold on the text field to select an input method.

Uppercase key

Backspace key

Enter key

Input options

Numeric/punctuation/symbol key

Connecting to the internet

Turn on Wi-Fi: From Main menu choose **Settings→ Wireless&networks→Wi-Fi**, and tap the other end next to "**OFF**". Then "**ON**" will appear when you have turn on the Wi-Fi.

Join a Wi-Fi network: From the detected network list, select a network, if necessary, enter a password and tap "**Connect**" to save the settings for the encrypted connection and connect to Wi-Fi. (Networks that require a password appear with a lock icon).

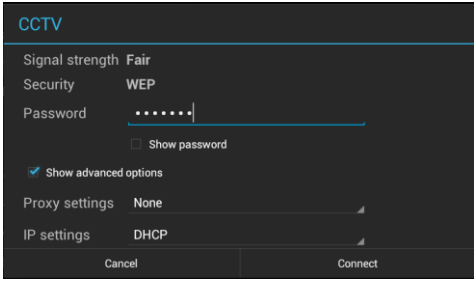

Select "**show advanced option**" to show more options.

Once you've joined a Wi-Fi network manually, it automatically connects to it whenever the network is in range.

Using a mobile data connection

Insert a 3G mobile data card into the 3G dongle(not included), and connect the 3G dongle to EVOTAB 4 via the USB cable, then turn EVOTAB 4 tablet on, to enable data access over mobile network, from Main menu choose **Settings→ Wireless&networks → More → Mobile networks →Data enable** then will appear on the right.

Switching Screen orientation

Screen orientation can be set to vertical or horizontal

via the built-in G sensor.

- From Main menu, tap **Settings → Display**, select **Auto-rotate screen**.
- Rotate the unit and the screen rotates too, automatically adjusting to fit the screen.

Web browser

Voice search

Voice search enables you to speak instead of typing for the web searching.

- From **Main menu** or **Home screen**, tap on to display voice search box.
- Say your search term when it appear "speak now"(If not, tap on the top right), it will automatically recognize the voice and search the internet.
- The search results show up just as if you had typed the search term.

Note: Voice Search is not available in all languages.

View a webpage

- From **Main menu**, tap **Browser** to open web browser.
- Tap the address bar at the top of the screen.
- On address bar, type the web address and tap **Enter**.

- Tap the link on the webpage to open a new webpage.
- Drag up and down to scroll around the webpage.
- Double tap or pinch on the webpage to zoom in or zoom out.
- In zoom mode, drag left, right, up,down to move the webpage.
- The multiple webpage windows opened at a time are shown on the top screen. Tap on the desired window to enlarge to full screen mode.
- To return to the previous page, tap the button.

Notice:

- To switch screen orientation, rotate the unit.
- Browser start page always defaults to Google home page.

Add bookmark

Tap to add the current visited webpage as bookmark.

Bookmarks List

Tap to show bookmarks list, tap a bookmark to open the webpage. Touch and hold the bookmark to display the option menu for bookmark.

- History

Access to view history lists. To remove these lists, tap , then select **Clear history**.

- Settings

Tap to use more available function, including Privacy & security, Accessibility and so on.

Refresh/Stop

Tap to refresh on the current page, tap **X** to stop loading the current page.

Forward

Tap ←/→ to go to previous/next webpage screen.

Using the option menu

Tap to display the browser option menu. Tap on the desired item to use webpage viewing control.

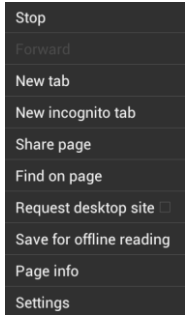

Watching Videos

Playing videos

- On the **Home screen** or **Main menu**, tap **Super-HD Player→Video folder** to open video player.
- Drag up and down to scroll through the file list.
- Tap to select a video file for playback.
- Touch and hold on the selected video file to delete it.

Controlling Video Playback

When playing video, tap on the screen to pop up control toolbar.

Play or Pause a video	Tap / .
Play previous/next video	Tap /
Fast rewind or fast forward	Touch and hold / .
Skip to any point in a video	Tap anywhere or drag the playhead on the progress bar.

Adjust the volume level.	Tap / or use the buttons on the side of EVOTAB 4.
Display video menu	Tap .
Return to the video browser screen	Tap .

Notices:

- If a bookmark is added, it allows you to continue playing from the bookmark when you open the video file next time.
- Video player supports subtitle file, please load the subtitle file to be displayed on the current video, unless the subtitle is integrated into the video itself.
- The Tablet PC supports subtitle of sub, ssa, srt, lrc format,encoded in UTF8 format.
- The file name of the subtitle must be identical to that of the video file. The subtitle will be loaded automatically during video playback.

Using video playback menu

During the video playback, tap to display the Playback menu.



Tap on the option icon to use more video playback control, such as set full screen ratio, Subtitle, 3D mode and so on.

Playing Music

About music library
From **Main menu**, tap **Music** to enter into music library.

Sorting by artist

Sorting by album

All songs

Sorting by Playlist

Return to Now playing screen

Playing songs

1. From Home screen or **Main menu**, tap **Music** to enter music library.
2. Tap on a desired tab to enter song list.
3. Drag up and down to scroll the song list.
4. Tap the desired songs to start playing.

Note: If you want to exit music mode, tap to pause, then tap or .

Controlling Song Playback

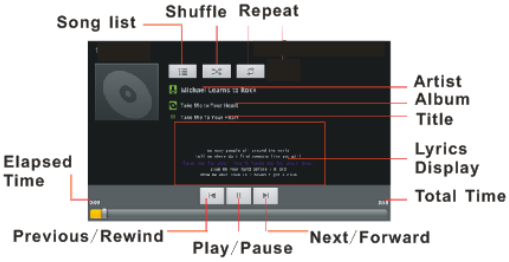

Pause or play songs.	Tap / .
Play previous or next song.	Tap / .
Fast rewind or fast forward	Touch and hold / .
Skip to any point in a song	Tap anywhere or Drag the playhead on the progress bar.
Adjust the volume level.	Tap / button or use the volume buttons on the unit.

Display the current song list	Tap .
Set shuffle mode	Tap .
Set Repeat mode	Tap .
Display the music playback menu	Tap .
add the current playing song to playlist	Tap → **Add to playlist.**
Delete the current song	Tap → **Delete.**
To return to the Media Library	Tap .

Using the playlist

Use the playlist to manage the songs in the library

Creating a new playlist

In the music playback screen, tap→ →

→**New**, and enter the name for the new playlist, then tap **Save**.

Adding the current song into playlist

In the music playback screen, tap

.

Tap on a desired playlist, then the current song has been added into the selected playlist.

Viewing photos

On the **Home screen** or **Main menu**, tap **Super-HD Player→Photo folder** to view photo.

Thumbnail View

Thumbnail view displays the catalog as a table of thumbnail images in adjustable sizes.

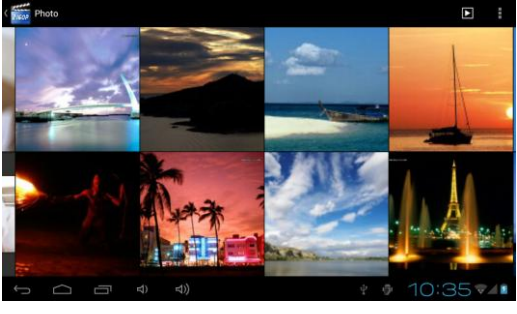

- Tap on the desired photo to full screen view.

- In full screen mode, tap to return to thumbnail view mode.

Start to view photo

Tap on the screen to show / hide the control bar.

View the previous / next photo.	Flick Left/Right on the screen.
Zoom in or zoom out	Use two fingers to pinch on the viewing screen.
Set slide show effect	Tap → **Slideshow**
Edit the picture	Tap → **Edit**
Rotate the photo by 90 degrees clockwise, counterclockwise	Tap →Rotate left/Rotate right .
Crop the picture	Tap → **Crop.**
Set the photo as wallpaper	Tap → **Set picture as wallpapter.**
Display photo informaiton	Tap → **Details**
Share the photo with others.	Tap .
Delete or save photo	Tap .

Return to thumbnail mode.	Tap .

Notes:

- In zoom in /out mode, drag your finger up, down, left or right to move photo.
- Rotate the unit to switch screen orientation.

Using Camera

From **Main menu**, tap **Camera** to enter camera mode.

- Tap to select Camera mode, tap to switch to Camcorder mode
- Tap to preview on taking photo or recording video.
- Press to take photo or record video, and photo/video file will be saved automatically.
- Tap to display setting menu.
- Tap the thumbnail icon at top right to view the photo or play back the video.
- Press the **Return** button to exit from the camera

mode.

Camera settings

- Tap to set White balance.
- Tap to set Exposure.
- Tap to set Store location/ Picture size.

Camcorder settings

- Tap to set White balance.
- Tap to set Time lapse interval.
- Tap to set Store location.

Sound Recording

From **Main menu**, tap **Sound Recorder** to enter sound recording mode.

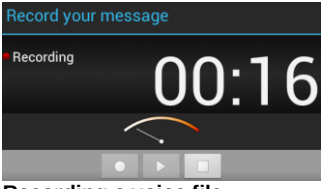

Recording a voice file

- Press to start recording a voice file.
- Press to stop recording.
- Press to play back the current recorded voice file.
- It will display a message window to choose "**Done**" or "**Discard**", choose "**Done**" to save the voice file; choose "**Discard**" to discard the voice file.
- A recording time indicator will appear during the recording.
- Repeat the above steps to record more voice files.

Play back the voice file

- The record is saved in Record folder, open "Explore", then open Record folder, tap on the desired recorded file to be played .

Gmail

Setting up Gmail Accounts
Prior to the use of e-mail, you need to set up the mailbox account.

1. From **Main menu**, tap **Gmail→Sign In**.

2. Enter your user name and password, tap **Sign In** to continue.

3. Set P03/IMAP server (If necessary, obtain the required information from your network administrator, then tap **Next** to check server setting.

Using the mailbox

- In the mailbox, drag up and down to scroll the mail list.
- Tap to open the mail you want to read.
- On the mail list, touch and hold on the mail to display option menu.

- Use the option menu, the available options are: Read, Archive, Mute, Mark read, Delete, Add bar,Change labels.

- **About the Mail menu**

In the mail list, tap to display a mail menu.

- Refresh：Refresh Mail
- Compose：Write a new mail
- Account：View all e-mail accounts
- Go to labels: go to home screen of the Gmail
- Search: Search for the desired mail
- Setting: Set email account

Delete mail account

1. In the mail list, tap to display a mail menu.
2. Tap **Accounts** to display email account.
3. Tap to display a option menu, select **Account settings**.
4. Tap on the mail to be deleted to go to next screen, then tap on **Remove account**.

Notice:

- You can set multiple mail accounts, tap Add account.
- Each time you use mail, the system will automatically jump to the default account.

File Manager

- From **Main menu**, tap **File Manager.**
- Tap to select **Internal / Micro SD card memory/USB** at the top bar to enter.
- Drag up and down to scroll through the file list to select the desired folder or file.
- Touch and hold the selected file or folder show the edit menu. If there is no response on the
- To open a file or folder, tap on the file or folder.

About the tool bar and the Edit menu

Tool bar

back

Internal memory

SD card memory

USB storage

Sort by picture

Sort by video

Tool box

Multiple selection

Edit menu

Touch and hold on the selected file or folder to show the Edit menu.

File Edit menu

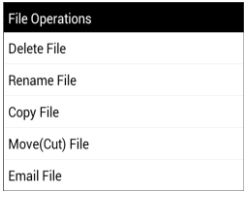

Folder Edit menu

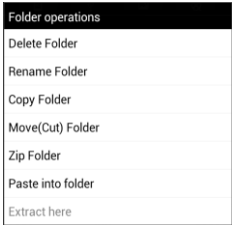

Select multiple files or folders

You can select multiple files or folders at the same time.

1. On the Tool bar, tap **.**

2. Tap the desired files/folders to be selected, then they will be marked with a "√". To cancel the selected items, tap on them again.

Copy / move files or folders

1. From the file list, tap to select the desired files/folders to be copied or moved, then select **Move** or **Copy**.
2. Go to the target folder that you want to put the selected file or folder, touch and hold to show the folder Edit menu.
3. Select "**Paste into folder**".

Note: it may take longer time to paste files/folder with big file size.

Rename the file or folder

1. From the file list, touch and hold the desired file or folder to show the edit menu, select **Rename Folder/file**
2. In file name field, use Onscreen keyboard to enter a new file name.
3. Tap **Rename** to confirm.

Delete files or folders

1. From the file list, tap to select the desired files/folders to be copied or moved, then they will be marked with a " √ " .
2. Select **Delete** to display a message window..
3. Select **Delete** to confirm the deletion.

Note: if only copy/move/delete one file/folder, you can touch and hold the desired file or folder to show the Edit Menu, then follow the above steps to do.

Attach file/folder via email

1. From the file list, tap to select the desired files/folders to be copied or moved, then they will be marked with a " √ " .
2. Select **Attach.**

Using the option menu

In file manager screen, tap to show the option menu.

Creating a new folder

1. Go to the desired mother directory.
2. Tap →**New Directory**.
3. In file name field, use Onscreen keyboard to enter a new directory name.
4. Tap **Create** to confirm.

Searching for a file

1. On file manager screen, tap to show the option menu.

2. In file name field, use Onscreen keyboard to enter the desired file name.
3. Tap **Search** to start searching for the desired file.

Configuring the settings for file manager.
1. On file manager screen, tap → **Settings**.
2. Choose the desired item on Display and Sorting to start setting.

Managing third party applications

This unit support third party applications (such as MSN, etc.), you can install or uninstall applications for the system.

Download and install the application

1. Download the desired applications into your computer.
2. Copy the downloaded applications to the unit (you can also download the desired applications from the brower in your EVOTAB 4 Tablet.).
3. Disconnect this unit from the computer.

Note: The system only supports XXX.apk format applications to be installed.

4. From **Main menu**, tap **Settings→Security→unknown source**.
5. In Explorer, find the directory where the application is placed to tap to start the installation.
6. After finishing the installation, you will see the Applications on the Main menu.

Uninstall application

1. From the **Main menu**, then tap **Settings→Apps**.
2. Select the application you desire to uninstall, then tap **Uninstall**.

Note: The default applications can't be uninstalled from the unit.

From Main menu, tap **Clock →** **Set alarm** to start clock alarm setting.

Set an alarm:

On clock setting screen, tap "**Add alarm**" to start to alarm setting.

Note: You can set multiple alarms.

Adjust any of the following settings:

- Tap **Time** to set the alarm time, tap + or - button to adjust the desired hours and minutes.then tap **Set** to confirm.
- Tap **Ringtone** to choose the ringtone that sounds when the alarm goes off.
- Tap **Vibrate** to enable vibrate mode.
- Tap **Repeat** and choose the days to set the alarm to repeat on certain days.
- Tap **Label** to give the alarm a description. It displays the label when the alarm sounds.

If at least one alarm is set and turned on, it will appear "**Alarm set:Time**" on home clock screen.

Turn an alarm on or off: tap the next to the desired alarm to turn the alarm on or off. If an alarm is set to sound only once, it turns off automatically after it sounds. You can turn it on again to reenable it.

Change settings for an alarm: tap the time of the desired alarm to be changed.

Delete an alarm: tap the time of the desired alarm to be deleted, select **Delete** to delete the alarm.



From Home screen or Main menu, choose **Settings**, then tap the desired items to be configured to start the Setting.

Wireless & networks

The Wi-Fi settings allow you manage networks, such as turn Wi-Fi on and join Wi-Fi networks.

Turn on Wi-Fi: From Main menu choose **Settings→ Wireless & networks→Wi-Fi**, and tap the other end next to "**OFF**". Then "**ON**" will appear when you have turned on the Wi-Fi.

Join a Wi-Fi network: From the detected network list, select a network, if necessary, enter a password and tap "**Connect**" to save the settings for the encrypted connection and connect to Wi-Fi. (Networks that require a password appear with a lock icon).

Select "**show advanced option**" to show more network control options.

If more than one previously used network is in range, EVOTAB 4 joins the one last used.

When EVOTAB 4 is connected to a Wi-Fi network, the Wi-Fi icon at the top of the screen shows connection strength.

Data usage

This item allows you to enable/disable the mobile data and set mobile data limit and view the data usage status.

Data usage

This item allows you to view the data usage status.

Sharing a Data Connection as a Portable Wi-Fi Hotspot

1. From home screen or Main menu,tap **Settings→ More → portable hotspot**.
2. If you select Portable Wi-Fi hotspot to share a data connection, you can tap **Set up Wi-Fi hotspot** to configure portable Wi-Fi hotspots.

More

Tap **More** to use more wireless network control including setting Ethernet & Portable hotspot, VPN, Wi-Fi direct, mobile networks and GPRS transfer prefer mode.

Airplane Mode

Airplane Mode disables the wireless features of EVOTAB 4 to comply with airline regulations.

Turn **Airplane Mode** on or off: From home screen or Main menu, tap **Settings→ More → Airplane Mode**. to turn it on or off.

Using a mobile data connection

Insert a 3G mobile data card into the 3G USB dongle(not included), and connect the 3G USB dongle to EVOTAB 4 via the USB cable, then turn EVOTAB 4 tablet on, to enable data access over mobile network,

from Main menu choose **Settings→ Wireless&networks → More → Mobile networks →Data enabled**, then will appear on the right.

Sound

Customize the sound settings, including the settings for Volumes, Default notification, Touch sounds, Screen lock sound.

Display

Customize the display settings, including the settings for Brightness, Wallpaper, Auto-rotate screen, Sleep, Font size, Accelerometer coordinate system and screen adaption, Smart backlight.

Storage

View the memory status of Micro SD card and internal storage, format internal storage.

Battery

View the battery status of EVOTAB 4.

Apps

Allows you to manage the applications sorted by Download, On SD card, Running and All.

Accounts & sync

Allows you to add new account and sync all the accounts.

Location service

Let apps use data from sources such as Wi-Fi and mobile networks to determine you approximate location. Moreover, let Google use your location to improve search results.

Security
Allows you to set Screen security, Encryption, Passwords, Device administration and Credential storage.

Language & Input
Set region and language, keyboard, text input methods, speech, Mouse/Track pad.

Backup & reset
Allows you to backup account, app data, Wi-Fi passwords, and other settings to Google servers. Additionally, you can erase all data on EVOTAB 4 and reboot into the system in Recovery mode.

Date& Time
Set date, time, time zone and display format.

Accessibility
Allows you to install web scripts, set large text, auto-rotate screen feature, speak passwords, touch and hold delay.

Developer options
Helps you manage the EVOTAB 4 system, such as USB debugging, Stay awake, HDCP checking and so on.

About tablet
Display the information about EVOTAB 4, such as product status, model number, firmware version, Build number and so on.

Chapter 4 Troubleshooting

If the device does not function as it is expected, please try the following steps.

The device is not responding or can't be turned on.

- Reset the device by pressing the **Power** button for 6 seconds. The device will be forced shutdown if it is on and you are required to restart the device again.
- Battery has been fully depleted. Please charge the device via USB or USB AC Adapter.

Battery Life seems short

- The operating temperature is below 5℃, this is due to the characteristics of battery and not a malfunction.
- The battery is not used for prolonged period. Please recharge the battery of the device again
- The battery is not fully charged. Please charge the device for 4 hours.
- The battery needs to be replaced. Please consult the authorized dealer for service.

The device can not be operated during USB connection

- The device cannot be operated while it is connected to PC.
- At status bar, flick upwards to display a Ongoing list, then select "**Turn off USB storage**" to resume operation.

Maintenance

- If Tablet PC does get wet, turn off Tablet PC immediately. Wait for Tablet PC to dry completely before turning on again.
- Clean the screen with a soft cloth; be careful not to wipe it with anything abrasive. When carrying your Tablet PC in bag, keep Tablet PC in the protecting case supplied to avoid scratches.
- If Tablet PC needs service, please consult the authorized dealer through the contact information provided in the warranty card. Faulty service may void the warranty.

Product Specifications

Display
7 inch TFT-LCD Display, 800x480 pixels
High resolution capactive multi-touch screen

Wifi
802.11 b/g

System Properties
Processor :A13
Architecture :ARM Cortex A8 (1GHz)
RAM Memory :DDR3 512M
Operating System:Android 4.04

Storage memory
Built in memory: 4 GBGB
Supports Micro SD card up to 32GB.

Media File Format supported
Audio: MP3, WMA, APE, FLAC, AAC, WAV, OGG
Photo: JPG, PNG, BMP, GIF, TIF
Video: Support up to HD2160P: AVI, MPG, MKV, RM, RMVB, MP4, MOV, VOB, DAT, FLV, TS, 3GP, WEBM (VP8) etc. 1080P decoder

Connectivity
Data transfer: Micro USB 2.0 High Speed, USB dongle
Audio: 3.5mm audio jack
Record : Microphone
Storage: Micro SD Card

Miscellaneous
Built in speaker
G sensor
Web Camera (0.3 million pixel)
Voice recording
Vibration actuator
Clock / Date
Real time battery indication

Battery life
Reading – more than 6.5 hours
Music – up to 10 hours(with backlight off)
Video- more than 5.5 hours
Web browsing : more than 4.5 hours
Standby time : 7 days

Charging
Power: DC 5.0V, 1.5A
Duration: 4 hours (approx)

Physical properties
Dimension: 182.4*121.8*11.2mm
Weight: 299g (approx)

※ Design and specifications are subject to change without prior notice

Certification information

On FCC

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installations.This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THE DEVICE. ANY SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

On CE

CE The symbol means that the unit complies with European safety and electrical interference directives.

Copyrights and Trademark Notice

Copyright laws prohibit copying the data of this product or the contents of this manual (illustrations, related documents, etc.) in whole or in part without the permission of the copyright holder. Additionally, use of the data of this product or the contents of this manual is not allowed without vendor's permission except for personal use.
All the brand and product names are trademarks of their respective companies.

Disposal and Recycling Information

Your Tablet PC must be disposed of properly according to local laws and regulations.
Because this product contains a battery, the product must be disposed of separately from household waste. When your Tablet PC reaches its end of life, contact your local authorities to learn about recycling options.

Battery Replacement:
The rechargeable battery in it should be replaced only by an authorized service provider.

This symbol on the product or in the instruction means that your electrical or electric equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU,For more information, please contact the local authority or your retailer where you purchased the product.

Disclaimer

All the information, design and specifications contained in this manual were correct at the time of publication. However, as the product is under continuously upgrading, the final device may have a slightly difference in appearance or modified functionality than presented in this manual.